

HomeDVR-KT1 Quick Start Guide


One Outdoor Wireless Camera System Kit Audio, Night Vision, and SD DVR






Package Contents

- HomeDVR
- Remote Control
- Camera (SM-302TX)
- Receiver (SM-302RX)
- Cables
- Accessories




Installation




- Connect the power adapter (DC 8V, 300mA) to the wireless camera and the other end into an electrical outlet as shown on the right.
- Check to make sure the antenna is connected to the wireless receiver as shown on the right.
- Connect the power adapter (DC 8V, 300mA) to the receiver and the other end into an electrical outlet. Press the  Power ON/OFF button to turn on the wireless receiver as illustrated on the right.
- The receiver should be default matches and use 906MHz frequency or CH1. Please be noted that the CH button is not applicable in this model as shown on the right.
- Locate the AV cable provided; connect one end of the AV cable 3.5mm jack to the HomeDVR AV IN 1 port and connect the other end into the red (white to red) audio socket and yellow (yellow to yellow) video socket of the wireless receiver as illustrated on the right.

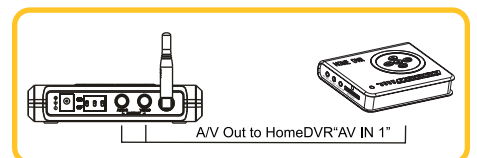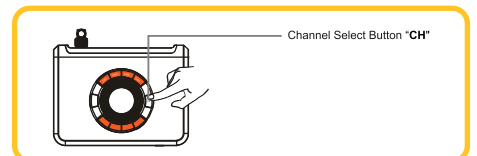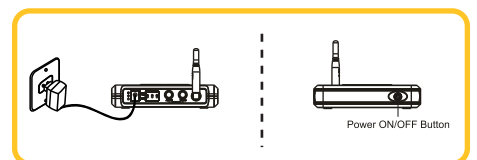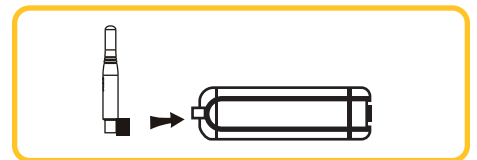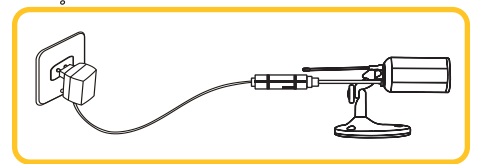

HomeDVR-KT1 Quick Start Guide

One Outdoor Wireless Camera System Kit Audio, Night Vision, and SD DVR

- vi** Locate the AV cable provided; connect one end of the AV cable 3.5mm jack to the HomeDVR AV OUT port and then connect the other end to the AV input of a monitor (ie. CCTV monitor, TV, and etc.). Be sure to match the color of the AV input socket when connecting to a monitor source. Turn on the monitor and change the monitor video (ie. LINE1, LINE2, VIDEO1, VIDEO2, and etc.) to the auxiliary input mode.
- vii** Connect the power adapter (DC 6V, 800mA) to the HomeDVR power socket and the other end into an electrical outlet.
- viii** Insert an SD card (not included) into HomeDVR's SD card slot. Make sure the SD card clicks into the card slot when inserting.
- ix** Turn on the HomeDVR using the  power ON/OFF switch located at the right-side front of the DVR. Verify the power LED light is lit and a HomeDVR start up screen will display in blue as shown on the right.
- x** Press the "REC" button to start manual recording.

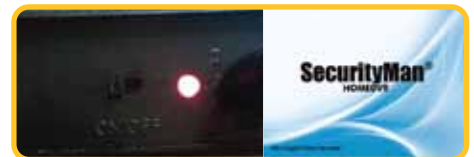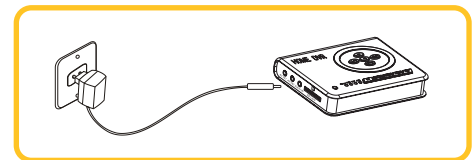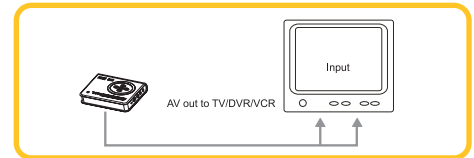

NOTE: Please note the SD memory card is NOT included in the package. HomeDVR use a standard SD memory card memory, supporting up to 32GB in capacity. For alarm input, alarm output, motion detection, and all other inquiry, please reference the HomeDVR-KT1 user's manual for detail.