

90.0 mm

300.0 mm

Wireless Doorbell Button

AIR-ALARMII/IIB Add-on Accessories: SM-82



SecurityMan®
www.securitymaninc.com

Functions/Features:

- Installed on an entrance door.
- The alarm host will make 3 “Ding Dong” sound per ring.
- Low-battery LED indication



 
Specifications:

- Operating power: Li-ion battery (3.7V / 200mA)
- Charging time: 12 hours
- Emitting distance: ≥ 150m (in open area)
- Service life: ≤ 3 year

Installation and Usage:

Install the mounting bracket using the screws provided to a desire location intended for visitors to ring the doorbell. Situate it about 1.4m above the ground is recommended. Next, switch the power switch to the ON position on the doorbell and then place it in an up right position over the mounting bracket and slide the doorbell down to secure the doorbell.

Press on the doorbell button once to get three doorbell sound on the alarm host and the blue LED light status will appear on the doorbell to indicate that the host is ringing. Recharge the battery when the low-battery LED light flashes blue by connecting the doorbell to a computer USB port with the USB cable provided or any third part USB A/C adapter (5VDC, 500mA).

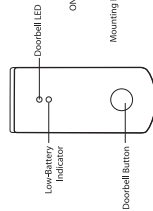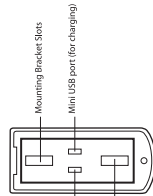

please use screws (F) to install the mounting bracket.

Adding and Cancelling Doorbell Button

To Add:

Press PRGM + Password + ENT + 70 + ENT + XX + ENT-----The “Learn” light will appear solid blue.

Note: The XX indicates group number of the defense zones, including zone 06 through 15.

Press the doorbell button twice consecutively, the host alarm will beep in series and the “Learn” light flashes five times and then turns off to indicate the doorbell button has been successfully added.

To Cancel:

Press PRGM + Password + ENT + 71 + ENT + XX +

ENT-----The alarm host will beep twice then the “Learn” light will flash once and then turns off to indicate the doorbell button has been successfully cancelled.

Note:

1. The alarm host can only learn 1 wireless device (Wireless Doorbell Button) at one time, a total of 4 wireless Devices (Wireless Doorbell Buttons) to a zone/group can be added. For example, if 4 sensors were to be added to zone/group 01 through zone/group 15, it total 60 sensors in all.
2. The data code of Wireless Doorbell Button is special and it does not take any room of wireless sensors in any defense zone.
3. If 1 Wireless Doorbell Button is removed from a group, then all wireless devices (Wireless Doorbell Button and wireless sensors) in the group will be automatically removed, and each device(s) will have to be added again to the alarm host.

Front