 


## Door Handle Vibration Security Alarm (2 Pack)

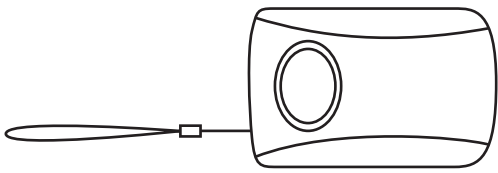

### Introduction

The SecurityMan door handle vibration alarm scares off unwanted intruders that tamper with your door. Ideal aid for caregivers that need to monitor the wearabout of children and elderly. Simply hang the alarm on the inside of the door knob. The VIBRATIONALARM detects vibration that occurs when someone touches the handle from the outside which triggers an ear piercing alarm sound of 130dB.

### Features:

- Extremely loud 130dB siren
- 4 sensitivity levels so you can make adjustments in windy areas
- Works on any type of doorknobs, including metal, French, standard, and plastic doorknobs
- 2 alarm modes (30 sec and continuous)
- Simple to arm and disarm
- Batteries included

### Package Contents




- 2x Vibration alarms with lanyard
- 2x 9V Batteries
- Mounting dry wall screws
- User's guide

### Specifications

- Alarm time: 4 hours (continuous)
- Alarm mode: 30 seconds (default) or continuous
- Delay arm: 5 seconds
- Power: 9Volt battery
- Decibel:130dB
- Alarm power: 0.6W
- Standby current: 9uAh
- Product size:90\*56\*28mm
- Weight: net .75lb / gross 1.3lbs

### Setup and Operation

Remove the battery cover, insert the 9V battery and reattach the battery cover. To prevent damage to the alarm please make sure you properly align the polarities (+/-). Once the batteries are installed, hang the unit over the door handle and flip the switch to the ON position to arm.

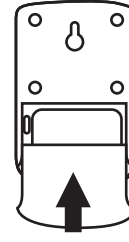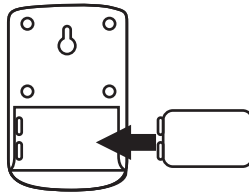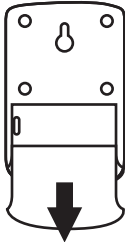

#### Arming

To arm the unit, simply move the on/off switch to the ON position. After moving the switch to the on position there is a 5 second delay time to arm which will allow you to make changes to the alarm settings (sensitivity level and alarm duration). After the 5 second delay time you will hear a single "beep" indicating that the unit is armed and any vibration afterwards will trip the siren.

#### Disarming and stopping the siren

Once the alarm is tripped you can press the SET button to stop the siren and keep it armed or move the on/off switch to the OFF position to turn it off. Please keep in mind that pressing the SET button is kind of like a restart button. It will stop the siren; start the 5 second delay to arm and then arm itself again.

- Off = Turns the unit off
- Set = Stops the siren and keeps the unit armed

#### Changing the alarm time duration

The unit is set to use the 30 second alarm duration every time the unit is turned on by default. To switch it to a continuous "non-stop" duration, simply press and hold the SET button until you hear 2 beeps.

When set to the default 30 second alarm duration, the alarm will sound off for 30 seconds then silence itself and repeat the 30 second alarm duration every time vibration is detected.

When set to continuous, the alarm will sound off until the SET button is pressed to silence the alarm and presume armed or until the battery dies (approx. 4 hours).

#### Changing the sensitivity level

The unit is set to use the highest sensitivity every time the unit is turned on by default. To change the sensitivity simply press and release the SET button until you reached the desired level.

- 1 beep: Max (default every time the unit is turned on)
- 2 beeps: High
- 3 beeps: Medium
- 4 beeps: Low

#### Warranty:

SecurityMan warrants that this product will be free from defects in materials and workmanship for one year or otherwise specified on the product packaging. This limited warranty shall commence from the date of purchase. SecurityMan Products warranty is not transferable and is limited to the original purchaser. If the product is found to be defective then, as your sole remedy and as the manufacturer's only obligation, SecurityMan will repair or replace the product. This warranty shall not apply to products that have been subjected to abuse, misuse, abnormal electrical or environmental conditions, normal wear and tear or any condition other than what can be considered normal use.

 
#### Copyright Notice

This manual is furnished under license and may be used or copied only in accordance with the terms of such license. Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or any means, electronic, mechanical, recording, or otherwise, including translation to another language or format, without the prior written permission of SecurityMan. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by SecurityMan. SecurityMan assumes no responsibility or liability for any errors or inaccuracies that may appear in this book. All other product names, trademarks and registered trademarks in this document are the properties of their respective holders.

SecurityMan®  
 4601 E. Airport Drive, Ontario, CA 91761, USA  
 Tel: 888-977-3777 or 909-230-6668 Fax: 909-230-6889  
 Email: info@securitymaninc.com Website: http://www.securitymaninc.com  
 Copyright 2019 by SecurityMan v2.2

If you encounter any difficulty in the operation of this product after reading the manual, please feel free to contact us. You can reach us by phone at 1-888-977-3777 from 8:30 AM to 5:30 PM Monday through Friday (Pacific Standard Time) or by email techsupport@securitymaninc.com. We will be happy to answer your questions and help you in any way we can.

### Product basics

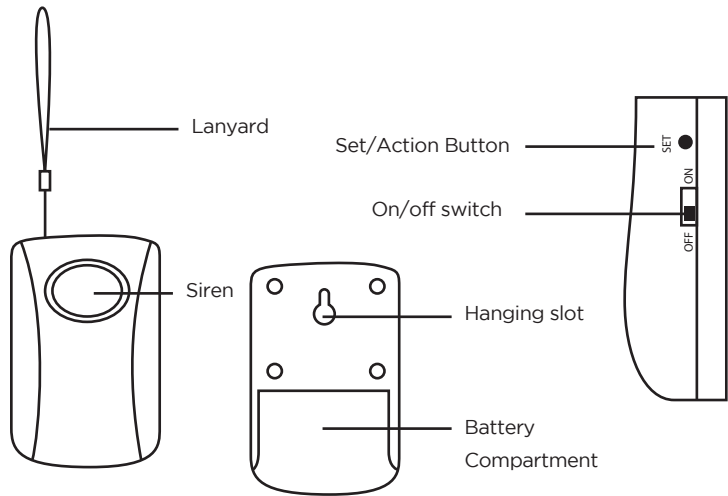

**On/Off switch:** Turns the unit on and off.

**Note:** The alarm is fully armed as soon as the switch is moved to the ON position and will sound off when vibration is detected after the 5 second delay to arm expired.

**Set/Action button:** Used to change the sensitivity level and switch the alarm sound time frame.

Press and release to change the vibration sensitivity level while system is ON.

- 1 beep: Max (130dB, default every time the unit is turned on)
- 2 beeps: High
- 3 beeps: Medium
- 4 beeps: Low

Press and hold to change the alarm sound time frame while system is ON.

- 1 beep: 30 Seconds (default every time the unit is turned on)
- 2 beeps: Continuous